

Where's My Phone Pro for BlackBerry™ - Wallet Card

Send email to your device with the code word, followed by space, followed by command below in the email subject. User's guide at www.essare.net. Version 3.5

Notes:

Basic Commands

START = start alarm and alert screen

STOP = cancel alarm and alert screen

QUIET = silence audio alarm, keep alert screen active

LOCATE = have phone report GPS location if available. Alert doesn't need to be active

CALLME ### ### ##### = have phone call you at this number. Alert doesn't need to be active

Advanced Commands

STARTQUIET = Display the alert screen without the audio alarm (like START followed by QUIET)

CALLBACK ### ### ##### = change callback number on current/next alert screen

MESSAGE new message = change alert message on current/next alert screen

CONTACTS = have phone email or SMS you data from contacts (address book)

WMP RECOVERCODE (no code word) - must send from specified email. Replies with code word recovery hint.

DISABLE = sends you one-time command codes for Permanent Alert, Remote Erase, and Remote Disable

HELP = sends a list of commands